

Activation Process for the Web Filter and the Security Reporter

Please follow the appropriate set of instructions below in order to activate the appliance. It is critical to activate Security Reporters (including WFR) as soon as possible; otherwise, data more than three weeks old will be purged permanently. For WFR appliances, please follow the instructions in both the “Activating the Web Filter” and the “Activating the Security Reporter” section.

Activating the Web Filter

- **1: Open your web browser and go to**
www.m86security.com/support/activate-appliance.asp

The screenshot shows a web browser window with the address bar containing the URL <http://www.m86security.com/support/activate-appliance.asp>. The browser tabs include "M86 Web Filter and Reporter", "M86 Security Web Filter", and "Support | Activate Appl...". The page header features the M86 Security logo and navigation links: Home, Security Labs, SecureBrowsing, and VuSafe. A secondary navigation bar includes Solutions, Products, Support, Resource Center, Evaluate, Partners, and About M86, along with a search bar. The main content area is titled "M86 Support" and "Activate Appliance", with a prominent "step 1" graphic. Below the graphic is the "End User License Agreement" section, which includes a warning: "IMPORTANT – READ CAREFULLY: This End User License and Warranty Agreement (this “Agreement”) is a legal agreement between you, a purchaser and/or any end user, either an individual or an entity (“You” or “Your”) and M86 Security (“M86”) for the license of one or more of the software products listed above (the “Software”) embedded in the M86 Security hardware device (the “Hardware”), and for the warranties for such Software and Hardware. The Software and Hardware are collectively referred to as, the “Product”. By breaking the seal on the envelope containing the Software, accessing, installing, copying or otherwise using the Software or Hardware, You agree to be bound by the terms of this Agreement. If You do not agree to the terms of this Agreement, M86 Security is unwilling to license the Software to You. In such event, You may not access, use or copy the Product and You should promptly contact M86 Security or the M86 Security authorized reseller from whom You licensed the Product for instructions on return of the Product. WRITTEN APPROVAL IS NOT A PREREQUISITE TO THE VALIDITY OR ENFORCEABILITY OF THIS AGREEMENT." The agreement is followed by numbered terms, including "1. SOFTWARE. The Software includes all component parts and features, any copies or derivatives thereof in whole or in part, any associated media and the following: machine-readable runtime instructions and object code, whether or not in printed form, and not in the form of human readable (source) code; machine-readable data, such as a data base; related licensed materials, including user documentation in any form; and all enhancements and modifications thereto furnished by M86 Security or its authorized resellers. The Software is licensed, not sold, to You for Your use only as provided herein. M86 Security reserves all rights not expressly granted to You under this Agreement." and "2. SOFTWARE LICENSE. 2.1 License. Subject to the payment of all applicable license fees, and the terms and restrictions set forth in this Agreement, M86 Security hereby grants to You a non-sublicensable, nonexclusive, non-transferable limited license to use the Software solely on the Hardware and for Your internal business purposes only, and to operate the Hardware during the Term solely to use the Software (collectively the “License”). You must limit use of the Product to the number of individuals for whom You have paid the required fees. Use of the Product by additional individuals may be subject to additional fees in M86 Security’s discretion. You may only install and use the Software on the Hardware. Once every six (6) months, M86 Security may, at its own expense, audit Your use of the Product at the Product’s installation site upon at least five (5) days notice to You during normal business hours. You may make a single copy of the Software in machine-readable form and only for archival purposes or to comply with disaster recovery procedures, provided that the copy You make contains all of the proprietary notices set forth in or on the original version of the Software. Otherwise, You may not copy the Software without M86 Security’s written approval." The page also features a sidebar with links to Customer Forums, Knowledge Base, Downloads / Documentation, Support by Product, Submit a Site, Support Services, Activate Web Filter, Contact Support, and Training Programs. An "Account Login" section is visible with fields for Email Address and Password, a "Log In" button, and a "Remember" checkbox. Links for "Forgot Password?" and "Register" are also present.

- **2: On the step 1 of the Activate Appliance page make sure you read the End User License Agreement and then click the **Accept** button.**

Customer Forums
Knowledge Base
Downloads / Documentation
Support by Product
Submit a Site
• M86 Filter
• Marshal Filter
Support Services
Activate Web Filter
Contact Support
Training Programs

Account Login
Email Address

Password

 Remember
[Forgot Password ?](#) | [Register](#)

Activate Appliance

step 1

End User License Agreement:

In order to activate your M86 Security Product, please read the following carefully. You must accept the End-User License Agreement in order to proceed with the activation process.

IMPORTANT – READ CAREFULLY: This End User License and Warranty Agreement (this "Agreement") is a legal agreement between you, a purchaser and/or any end user, either an individual or an entity ("You" or "Your") and M86 Security ("M86") for the license of one or more of the software products listed above (the "Software") embedded in the M86 Security hardware device (the "Hardware"), and for the warranties for such Software and Hardware. The Software and Hardware are collectively referred to as, the "Product". By breaking the seal on the envelope containing the Software, accessing, installing, copying or otherwise using the Software or Hardware, You agree to be bound by the terms of this Agreement. If You do not agree to the terms of this Agreement, M86 Security is unwilling to license the Software to You. In such event, You may not access, use or copy the Product and You should promptly contact M86 Security or the M86 Security authorized reseller from whom You licensed the Product for instructions on return of the Product. **WRITTEN APPROVAL IS NOT A PREREQUISITE TO THE VALIDITY OR ENFORCEABILITY OF THIS AGREEMENT.**

1. **SOFTWARE.** The Software includes all component parts and features, any copies or derivatives thereof in whole or in part, any associated media and the following: machine-readable runtime instructions and object code, whether or not in printed form, and not in the form of human readable (source) code; machine-readable data, such as a data base; related licensed materials, including user documentation in any form; and all enhancements and modifications thereto furnished by M86 Security or its authorized resellers. The Software is licensed, not sold, to You for Your use only as provided herein. M86 Security reserves all rights not expressly granted to You under this Agreement.

2. **SOFTWARE LICENSE.**
2.1 **License.** Subject to the payment of all applicable license fees, and the terms and restrictions set forth in this Agreement, M86 Security hereby grants to You a non-sublicensable, non-exclusive, non-transferable limited license to use the Software solely on the Hardware and for Your internal business purposes only, and to operate the Hardware during the Term solely to use the Software (collectively the "License"). You must limit use of the Product to the number of individuals for whom You have paid the required fees. Use of the Product by additional individuals may be subject to additional fees in M86 Security's discretion. You may only install and use the Software on the Hardware. Once every six (6) months, M86 Security may, at its own expense, audit Your use of the Product at the Product's installation site upon at least five (5) days notice to You during normal business hours. You may make a single copy of the Software in machine-readable form and only for archival purposes or to comply with disaster recovery procedures, provided that the copy You make contains all of the proprietary notices set forth in or on the original version of the Software. Otherwise, You may not copy the Software without M86 Security's prior written consent. Except as expressly provided in this Section 2.1, this Agreement does not grant You any rights to patents, copyrights, trade secrets, trademarks, or any other rights in respect to the Software. All rights not expressly

- **3: On the step 2 of the Activate Appliance page you will need to enter the **Activation code** you received in your email from M86 Security and then click on **Activate**.**

The screenshot shows a web browser window with the URL <http://www.m86security.com/support/activate-appliance-2.asp>. The page title is "M86 Support" and the main heading is "Activate Appliance" with a "step 2" indicator. On the left, there is a navigation menu with links like "Customer Forums", "Knowledge Base", "Downloads / Documentation", "Support by Product", "Submit a Site", "Support Services", "Activate Web Filter", "Contact Support", and "Training Programs". Below the menu is an "Account Login" section with fields for "Email Address" and "Password", a "Log In" button, a "Remember" checkbox, and links for "Forgot Password?" and "Register". The main content area contains the text "Enter your activation code:" followed by an input field and the instruction "(enter the activation code from email)". To the right of the input field is an "Activate" button. Two red arrows originate from the text above: one points to the input field, and the other points to the "Activate" button.

Customer Forums
Knowledge Base
Downloads / Documentation
Support by Product
Submit a Site
• M86 Filter
• Marshal Filter
Support Services
Activate Web Filter
Contact Support
Training Programs

Account Login
Email Address

Password

 Remember
[Forgot Password ?](#) | [Register](#)

Enter your activation code:
(enter the activation code from email)

Contact Us | Feedback | Privacy | Terms | © 2011 M86 Security. All Rights Reserved.

- **4: If the Activation code is valid a Registration page will open up which will require you to enter all the information below in order to finalize the activation.**

Firefox | Support | Activate Appliance | +

www.m86security.com/support/activate-appliance-2.asp

M86 SECURITY

Home | Security Labs | SecureBrowsing | VuSafe

Solutions | Products | Support | Resource Center | Evaluate | Partners | About M86

Search...

M86 Support

Activate Appliance

step 2

R3000 Activation and Registration

Important: The serial number assigned for this activation code is [REDACTED]. If this is not your serial number for the R3000 you are activating, please contact support@8e6.com or your reseller right away and DO NOT continue with the activation process.

R3000 Serial No.	[REDACTED]
First, Last Name	<input type="text"/>
Organization/ Company	<input type="text"/>
E-Mail	<input type="text"/>
Address	<input type="text"/>
City	<input type="text"/>
State/ Province	<input type="text"/>
Zip/ Postal code	<input type="text"/>
Country	<input type="text" value="Select your country"/>

Account Login

Email Address

Password

Remember

[Forgot Password ?](#) | [Register](#)

Customer Forums
Knowledge Base
Downloads / Documentation
Support by Product
Submit a Site
• M86 Filter
• Marshal Filter
Support Services
Activate Web Filter
Contact Support
Training Programs

Contact Us | Feedback | Privacy | Terms | © 2011 M86 Security. All Rights Reserved.

- 5: Click **Activate** and your web filter will be activated and registered.


The screenshot shows the M86 Security website's 'Activate Appliance' page. The browser address bar shows the URL www.m86security.com/support/activate-appliance-2.asp. The page features a navigation menu with links for Solutions, Products, Support, Resource Center, Evaluate, Partners, and About M86. A search bar is located in the top right corner. The main content area is titled 'M86 Support' and 'Activate Appliance step 2'. On the left, there is a sidebar with links to Customer Forums, Knowledge Base, Downloads / Documentation, Support by Product, Submit a Site, Support Services, Activate Web Filter, Contact Support, and Training Programs. Below this is an 'Account Login' section with fields for Email Address and Password, a 'Log In' button, and a 'Remember' checkbox. The main form contains the following fields: R3000 Serial No. (with a redacted value), First, Last Name, Organization/Company, E-Mail, Address, City, State/Province, Zip/Postal code, Country (with a dropdown menu), Phone No, R3000 Hostname, R3000 IP address (optional), and Reseller (if known). At the bottom of the form is an 'Activate' button, which is circled in black and pointed to by a red arrow from the instruction above.

Activating the Security Reporter


**1: To get to the login page of the Security Reporter go onto:
<https://ApplianceIPAddress:8443/SR/>**

***Example:** *If your appliance ip address is 205.210.205.10 then you will have to put
[https:// 205.210.205.10:8443/SR/](https://205.210.205.10:8443/SR/) to access the login page.*

- **2: The web browser should indicate a certificate warning page. To continue click on the “continue to this website” link.**

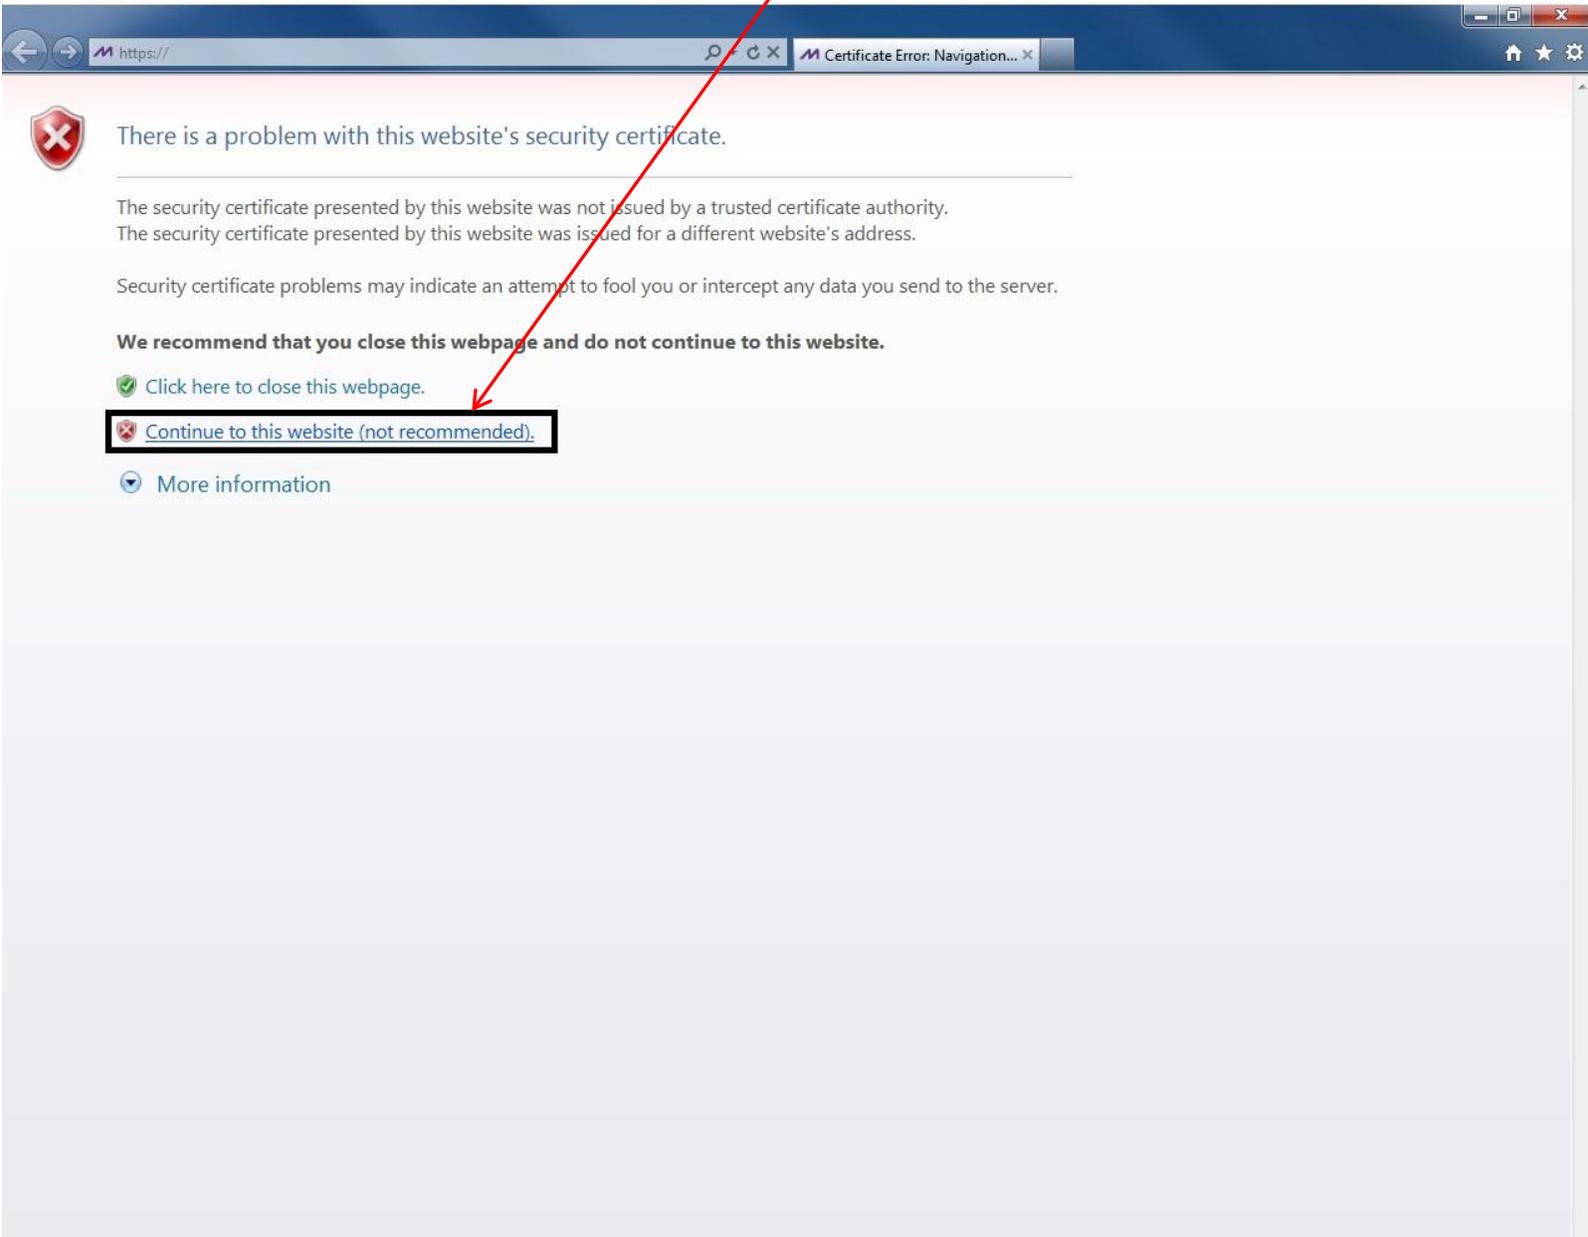

- **3: On the Log in page of the Security Reporter you need to enter the Username and Password.**

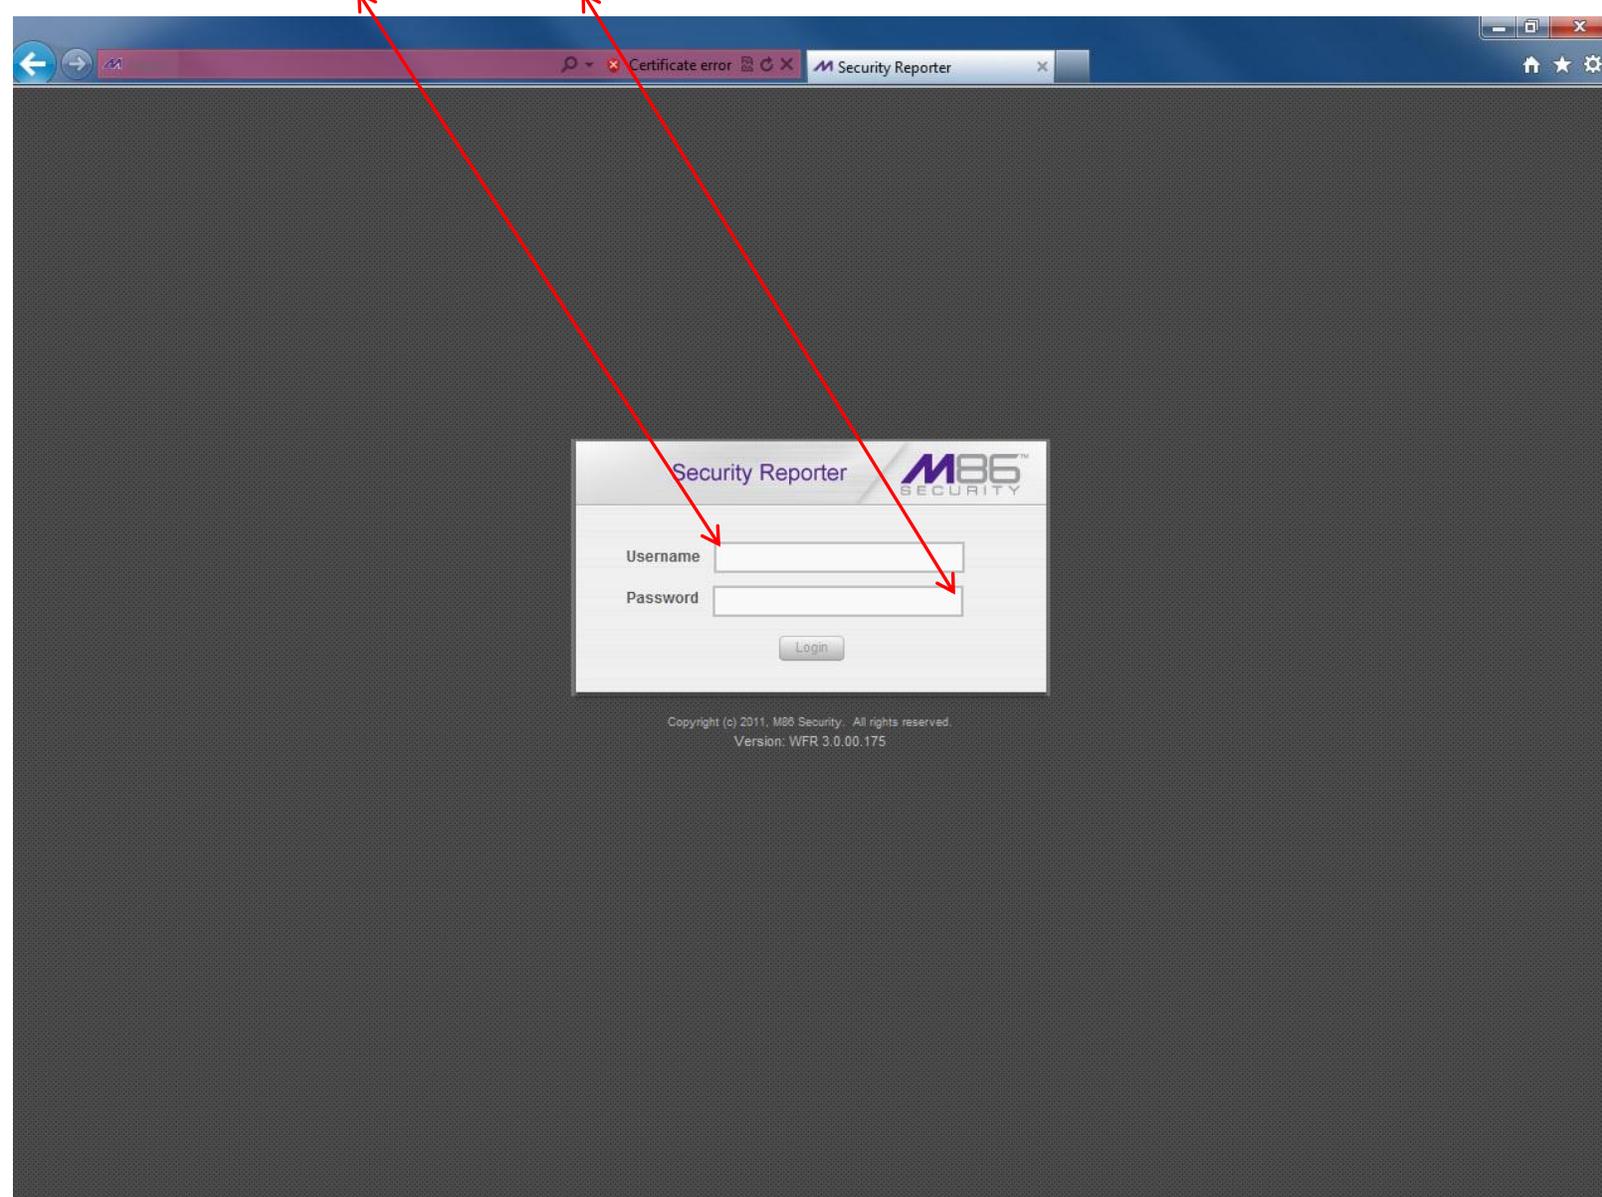

- **4: Your browser should open a pop up window that shows “EVALUATION MODE – MAX DATA STORAGE 3 WEEKS”. To continue go ahead and click the **Change Evaluation Mode** button.**

The screenshot shows the Security Reporter web interface. A pop-up window titled "SR Status - Windows Internet Explorer" is overlaid on the main content. The pop-up displays the text "EVALUATION MODE - MAX DATA STORAGE 3 WEEKS" in red, with a button labeled "Change Evaluation Mode" below it. A red arrow points from the text in the instruction above to the button in the pop-up. The background interface includes a navigation bar with "Network", "Server", and "Database" tabs, and a "Product Version" section indicating "Current Version: Web Filter and Reporter 3.0.10.30".

Product Version:
Current Version: Web Filter and Reporter 3.0.10.30

Server Status

EVALUATION MODE - MAX DATA STORAGE 3 WEEKS

Change Evaluation Mode

CPU Load Average
CPU states: 3.9%us
Memory: 4060660K
Swap: 2097148k tot

PID	USER
4311	dbus
26981	root

Filesystem


Filesystem	Mounted on
/dev/mapper/VG00-rootlv	
30393856	
/dev/md0	/boot
tmpfs	/dev/shm
/dev/mapper/VG00-8e6lv	
80700928	550220 80150708 1% /usr/local/8e6
/dev/mapper/VG00-shadowlv	
36682240	6638852 30043388 19% /usr/local/shadow
/dev/mapper/VG00-backuplv	
128911872	48444 128863428 1% /backup
/dev/mapper/VG00-dblv1	
172930560	152606716 20323844 89% /database/d1

NETSTAT

Proto	Recv-Q	Send-Q	Local Address	Foreign Address	State	PID/Program Name
tcp	0	0	localhost.localdomain:mysql	localhost.localdomain:34237	ESTABLISHED	30258/mysqld
tcp	0	0	localhost.localdomain:mysql	localhost.localdomain:59375	ESTABLISHED	30258/mysqld
tcp	0	0	localhost.localdomain:33218	localhost.localdomain:mysql	ESTABLISHED	5178/fetchagent
tcp	0	0	localhost.localdomain:34248	localhost.localdomain:mysql	ESTABLISHED	30413/scoresummary
tcp	0	0	localhost.localdomain:mysql	localhost.localdomain:48372	ESTABLISHED	30258/mysqld
tcp	0	0	localhost.localdomain:mysql	localhost.localdomain:48392	ESTABLISHED	30258/mysqld
tcp	0	0	localhost.localdomain:34237	localhost.localdomain:mysql	ESTABLISHED	5178/lockout-manage
tcp	0	0	localhost.localdomain:mysql	localhost.localdomain:33218	ESTABLISHED	30258/mysqld

➤ 5: On the activation page you will see a Hostname, IP and Mac Address.

Click on the “**here**” link to continue the activation process.

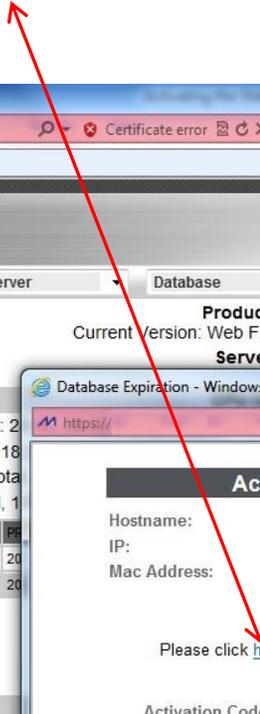

The screenshot shows the Security Reporter web interface. The main page displays system information such as CPU Load Averages, CPU states, Memory, and Swap. It also shows a list of filesystems and a NETSTAT table. An "Activation Page" dialog box is overlaid on the main page, containing fields for Hostname, IP, and Mac Address, a "here" link, an "Activation Code" input field, and an "Activate" button. The browser's address bar shows a "Certificate error" warning.

Product Version:
Current Version: Web Filter and Reporter 3.0.10.30

Server Status

CPU Load Averages: 2
CPU states: 3.9%us, 18
Memory: 4060660k total
Swap: 2097148k total, 1

PID	USER	PR
4311	dbus	20
26981	root	20

Filesystem

Filesystem	Size	Used	Available	Mount Point
/dev/mapper/VG00-rootlv	30393856			
/dev/md0				
tmpfs				
/dev/mapper/VG00-8e6lv	80700928	550224	80150704	1% /usr/local/8e6
/dev/mapper/VG00-shadowlv	36682240	6638852	30043388	19% /usr/local/shadow
/dev/mapper/VG00-backuplv	128911872	48444	128863428	1% /backup
/dev/mapper/VG00-dblv1	172930560	152606716	20323844	89% /database/d1

NETSTAT

Proto	Recv-Q	Send-Q	Local Address	Foreign Address	State	PID/Program Name
tcp	0	0	localhost.localdomain:mysql	localhost.localdomain:34237	ESTABLISHED	30258/mysqld
tcp	0	0	localhost.localdomain:mysql	localhost.localdomain:59375	ESTABLISHED	30258/mysqld
tcp	0	0	localhost.localdomain:33218	localhost.localdomain:mysql	ESTABLISHED	5176/fetchagent
tcp	0	0	localhost.localdomain:34248	localhost.localdomain:mysql	ESTABLISHED	30413/scoresummary
tcp	0	0	localhost.localdomain:mysql	localhost.localdomain:48372	ESTABLISHED	30258/mysqld
tcp	0	0	localhost.localdomain:mysql	localhost.localdomain:48392	ESTABLISHED	30258/mysqld
tcp	0	0	localhost.localdomain:34237	localhost.localdomain:mysql	ESTABLISHED	5178/lockout-manage
tcp	0	0	localhost.localdomain:mysql	localhost.localdomain:33218	ESTABLISHED	30258/mysqld

- **6: At the M86 Activation page fill out all the required information and the activation department will send you an activation code via email within 2 business days.**

Customer Forums
Knowledge Base
Downloads / Documentation
Support by Product
Submit a Site
• M86 Filter
• Marshal Filter
Support Services
Activate Web Filter
Contact Support
Training Programs

Account Login
Email Address

Password

 Remember
[Forgot Password?](#) | [Register](#)

Product Activation

Security Reporter

To activate your Security Reporter installation, please complete the following information.

Fields marked with an asterisk * are required

CONTACT DETAILS

First Name *
Last Name *
Phone *
Email Address *
Confirm Email Address *

Your activation code will be returned to this email address

COMPANY INFORMATION

Company Name *
Address 1 *
Address 2
City *

- **7: After receiving the Activation code copy and paste it in the **Activation Code** section, and click **Activate**.**

The screenshot shows the M86 Security Reporter web interface. A modal dialog box titled "Activation Page" is centered on the screen. The dialog contains the following text and elements:

- Hostname: [Redacted]
- IP: [Redacted]
- Mac Address: [Redacted]
- Please click [here](#) to activate your appliance.
- Activation Code:
-

Red arrows from the instruction above point to the "here" link and the "Activate" button. The background interface shows system statistics such as CPU Load Averages, Memory, and Filesystem usage, along with a NETSTAT table.

Proto	Recv-Q	Send-Q	Local Address	Foreign Address	State	PID/Program Name
tcp	0	0	localhost.localdomain:mysql	localhost.localdomain:34237	ESTABLISHED	30258/mysqld
tcp	0	0	localhost.localdomain:mysql	localhost.localdomain:59375	ESTABLISHED	30258/mysqld
tcp	0	0	localhost.localdomain:33218	localhost.localdomain:mysql	ESTABLISHED	5176/fetchagent
tcp	0	0	localhost.localdomain:34248	localhost.localdomain:mysql	ESTABLISHED	30413/scoresummary
tcp	0	0	localhost.localdomain:mysql	localhost.localdomain:48372	ESTABLISHED	30258/mysqld
tcp	0	0	localhost.localdomain:mysql	localhost.localdomain:48392	ESTABLISHED	30258/mysqld
tcp	0	0	localhost.localdomain:34237	localhost.localdomain:mysql	ESTABLISHED	5178/lockout-manage
tcp	0	0	localhost.localdomain:mysql	localhost.localdomain:33218	ESTABLISHED	30258/mysqld

*Make sure not to enter any spaces before or after the activation code.